

A5 148mm W x 210mm H

CANDY  
CH473DW4\_1-80



預設程序	最高洗衣量 kg	最高水溫 °C	圖示說明		
			2	1	1
棉質衣物 COTTONS	7	90°	●	●	(●)
節能 40-60°C ECO 40-60	7	60°	●	●	
牛仔褲 JEANS	3	40°	●	●	
毛衣/手洗 WOOL/HAND WASH	1	30°	●	●	
合成纖維/顏色衣物 SYNTHETIC AND COLOURED	3.5	60°	●	●	(●)
過水 RINSE	-	-	△	●	
排水 + 脫水 DRAIN & SPIN	-	-			
59' 纖幼衣物 DELICATE 59'	2.5	40°	●	●	
39' 運動衣物 SPORT PLUS 39'	2	30°	●	●	
59' 高溫快洗 HYGIENE PLUS 59'	2	60°	●	●	
一般快洗 RAPID	14'	1	40°	●	●
	30'	2.5	40°	●	●
	44'	3.5	40°	●	●
59' 全機快洗 MIXED & COLOURED 59'	7	40°	●	●	
59' 棉質快洗 PERFECT COTTON 59'	3.5	40°	●	●	
49' 全機快洗 SPECIAL 49'	7	40°	●	●	

A 程式選擇旋鈕

B 開機/關機

C 預校洗衣

D 其他選項

E 污漬/快洗選擇

F 溫度選擇

G 轉速選擇

F+G 面板安全鎖

I 門鎖指示



智能手機操作  
REMOTE CONTROL (Wi-Fi)