

A5 148mm W x 210mm H

CANDY
TCA286TM5-S



B C D E F G H A

預設程序		最高洗衣量 8 kg	最高水溫 °C (MAX.)	洗滌劑		
				1	2	預洗
49'	49' 全機快洗 SPECIAL 49'	8	40°	●	●	
14' 30' 44'	一般快洗 RAPID	14'	1.5	30°	●	●
		30'	2.5	30°	●	●
		44'	3.5	40°	●	●
39'	39' 運動衣物快洗 SPORT PLUS 39'	2.5	30°	●	●	
	59' 棉質快洗 PERFECT COTTON 59'	4	40°	●	●	
	59' 全機快洗 MIXED & COLOURED 59'	8	40°	●	●	
	59' 高溫快洗 HYGIENE PLUS 59'	2	60°	●	●	
	59' 纖幼衣物快洗 DELICATE 59'	2.5	40°	●	●	
	排水 + 脫水 DRAIN & SPIN	-	-			
	過水 RINSE	-	-	△	●	
	合成纖維/顏色衣物 SYNTHETIC AND COLOURED	4	60°	●	●	(●)
	毛衣/手洗 WOOL/HAND WASH	2	30°	●	●	
	牛仔褲 JEANS	3	40°	●	●	
	節能 40-60°C ECO 40-60	8	60°	●	●	
	棉質衣物 COTTONS	8	90°	●	●	(●)
	智能手機操作 REMOTE CONTROL (Wi-Fi)					

A 開機/暫停

B 溫度選擇

C 轉速選擇

D 蒸氣易熨

E 預校洗衣

F 其他選項

G 快洗/污漬程度選擇

B+C 面板安全鎖

H 特別功能