

A5 148mm W x 210mm H

CANDY

CO4274TWM6/1-S



預設程序		最高 洗衣量	最高 水溫	1 2		
	棉質衣物 COTTONS	7	90°	●	●	(●)
	節能 40-60°C ECO 40-60	7	60°	●	●	
	牛仔褲 JEANS	3	40°	●	●	
	毛衣/手洗 WOOL/HAND WASH	1	30°	●	●	
	合成纖維/顏色衣物 SYNTHETIC AND COLOURED	3.5	60°	●	●	(●)
	過水 RINSE	-	-	△	●	
	排水 + 脫水 DRAIN & SPIN	-	-			
	59' 纖幼衣物快洗 DELICATE 59'	2.5	40°	●	●	
	39' 運動衣物快洗 SPORT PLUS 39'	2	30°	●	●	
	59' 60°C 快洗 HYGIENE PLUS 59'	2	60°	●	●	
	14' 一般快洗	1	40°	●	●	
	30' 一般快洗	2.5	40°	●	●	
	44' 一般快洗	3.5	40°	●	●	
	59' 全機快洗 MIXED & COLOURED 59'	7	40°	●	●	
	59' 棉質快洗 PERFECT COTTON 59'	3.5	40°	●	●	
	49' 全機快洗 SPECIAL 49'	7	40°	●	●	
	智能手機操作 REMOTE CONTROL (Wi-Fi)					

A 開機/暫停

B 溫度選擇

C 轉速選擇

D 蒸氣易熨

E 預校洗衣

F 其他選項

G 快洗/污漬程度選擇

B+C 面板安全鎖