
## 使用說明 Operating Instructions

## WHV285HB/ WHV283HS

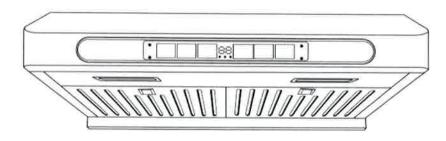

## Control switch:



## 使用說明:

Instructions:

1. 啟動抽油煙機,按下: "Power"鍵。 Open the cooker hood,press: "Power".

- 2. 此型號有3個速度,按下對應的按鍵啟動:高速 (High) 鍵、中速 (Medium) 鍵、低速 (Low) 鍵。
  This model have three speeds.Press: "High" to open the high speed/Press: "Medium" to open the medium speed/Press: "Low" to open the low speed.
- 3. 按下: "Light" 啟動LED燈。

Press: "Light" to open the LED light.

- 4. 在開機的狀態下,長按3秒: "Clean" 啟動熱除油功能: (熱除油膚洗15分鐘, 散熱1分鐘)。 In the case of opening the cooker hood, long press 3 seconds "Clean" that can open the heating clean function. (Heating clean 15 minutes, cooling 1 minute. If you need to stop it, please press "Clean" again.
- 5. 體感觸摸開關:從左往右:第一次:低速 (Low)、第二次:中速 (Medium)、第三次: 高速 (High) 從右往左:第一次:延時關機60秒、第二次:關機

Sensor touch key:

From left to right:the first time:open to the low speed, the second time:open to the medium speed. the third time: open to the high speed.

From right to left:first time:delay 60 seconds, second time:close the cooker hood.

6. 語音控制: (粵語)

開機唔該---啟動抽油煙機

最大風速---啟動高速 (High)

一般風速---啟動中速 (Medium) 最細風速---啟動低速 (Low)

開照明燈---啟動LED燈

関照明燈---関閉LED燈

進行清洗---啟動熱除油功能

停止清洗---関閉熱除油功能

延時関機---啟動延時関機60秒 (需要在煙機速度運行的情況下才能開啟延時功能)

関機唔該---関機

注意: 煙機運行或靜止15秒情況下或聽到"嘟"一聲,

需要重新喚醒煙機,請說:"開機唔該"進行喚醒,然後再進行下一步功能選擇。